



**CEMBRE**

# Composite Sleeper Drilling

Lee Coleman

National Sales Manager – Rail & Power

## Sekisui

### Fibre reinforced Foamed Urethane (FFU)

Continuous glass-fibre strands are soaked in polyurethane and a composite of the materials is obtained by curing at a raised temperature.




## Sicut

### Sicut Composite

Manufactured from a unique blend of recycled plastics, reinforced with glass fibre.



	Individual part number	Description
1	PRUM-U-PS	Movable guard
2	TPM250-31PS	Centering device
3	PRF-PS	Fixed Guard
4	PV190/250PS	PV Auger bit

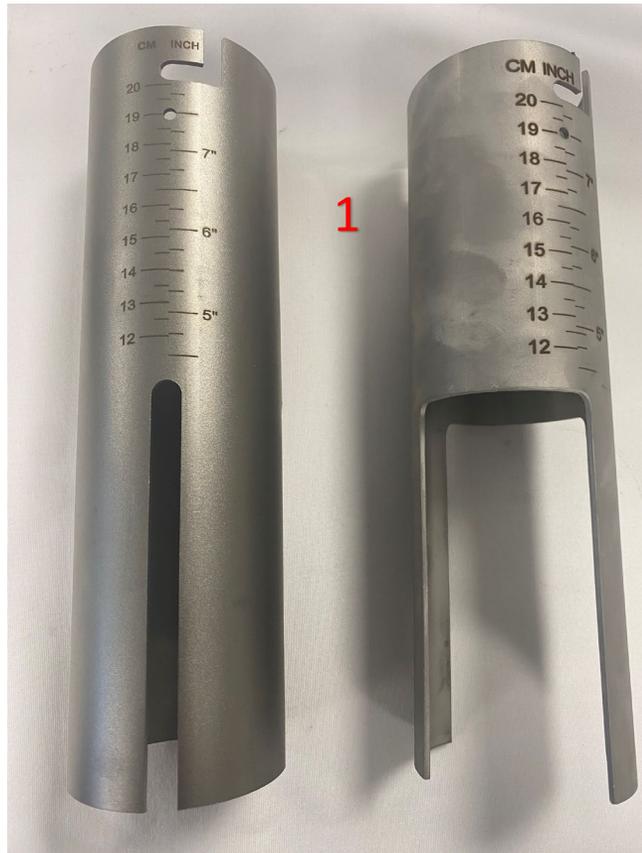

Remove existing fixed guard (including centering device) and moveable guard

Take off guide and slide onto new moveable guard

Remove existing auger bit by pulling down on the removal lever

Insert new Composite sleeper Auger bit – PV190/250PS

Attach TPM250-31PS Centering device to PRUM-U-PS Moveable guard

Attach PRUM-U-PS Moveable guard (with Centering device) to the SD

Sekisui

Modified or Standard attachments

Standard PV190 Auger bit



Sicut

Modified attachments

PV190 / 250



